


Details

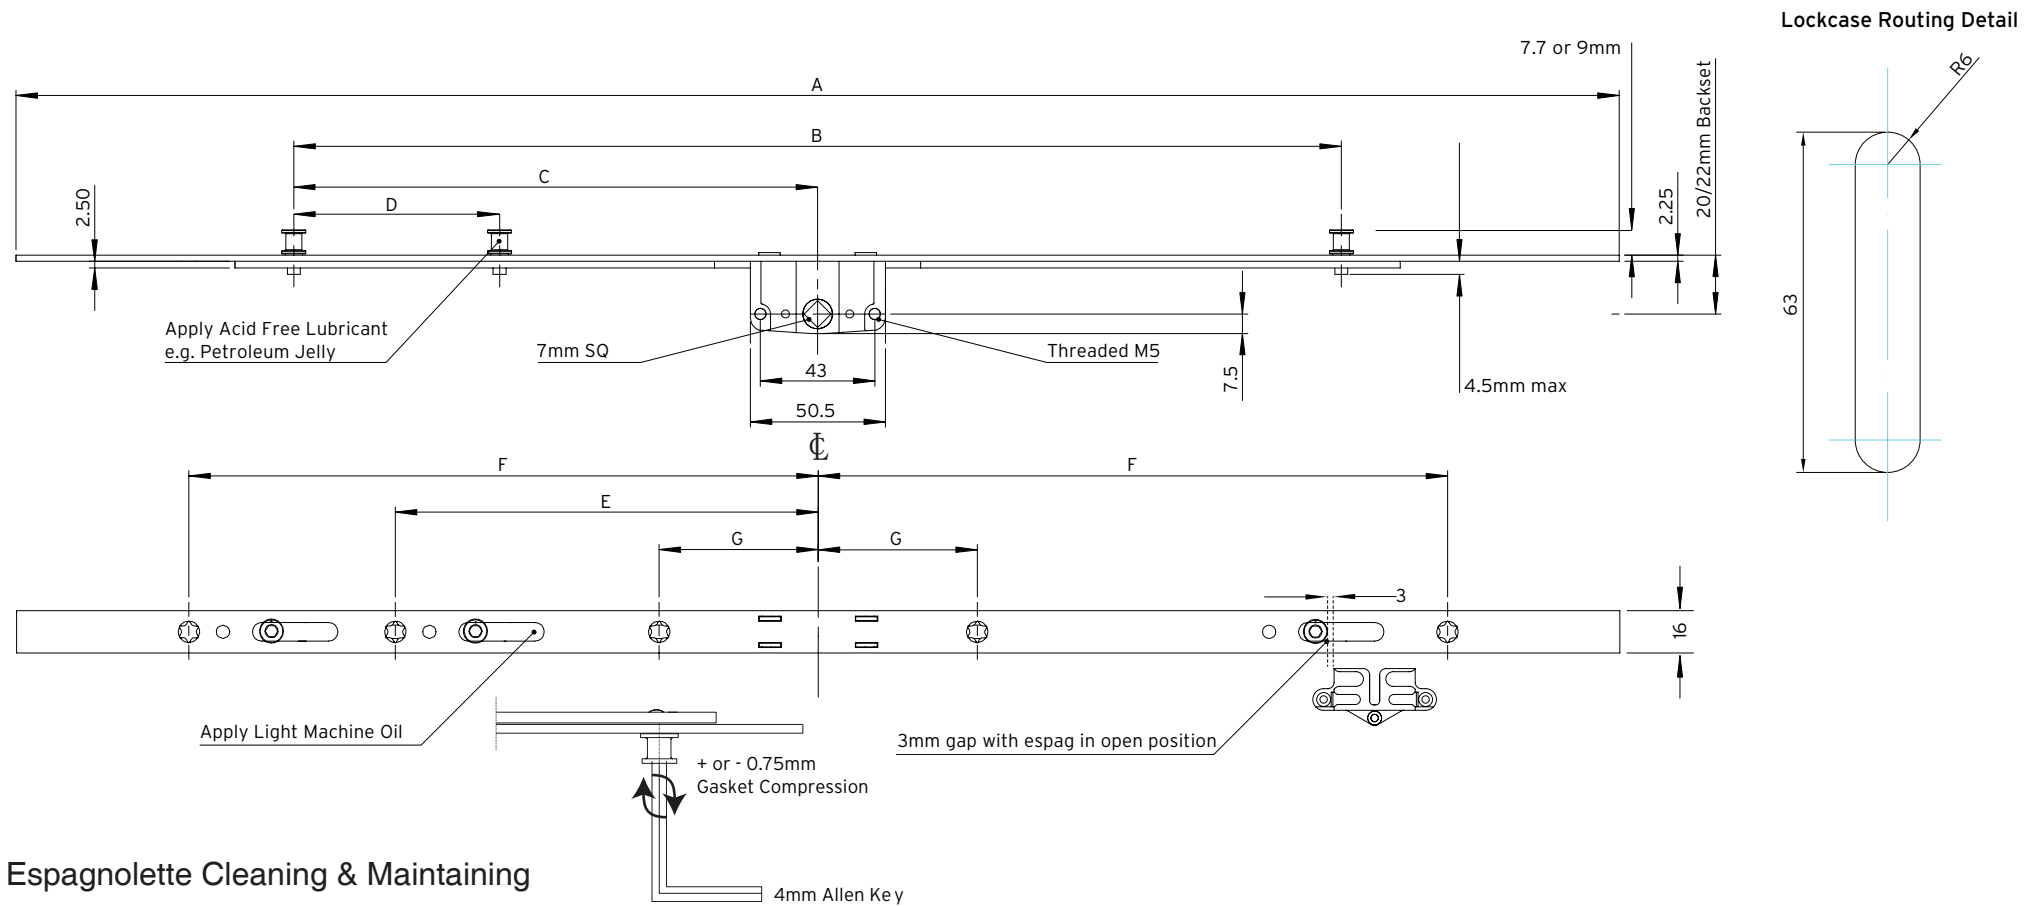

**Espagnolette Cleaning & Maintaining**

Espagnolette must be periodically inspected, cleaned and maintained to ensure continued operational performance.

Remove any debris using a soft brush, then wipe the surface of the espagnolette with a soft cloth. If necessary moisten the cloth with light oil.

DO NOT use abrasives, detergents or corrosive cleaners.

Fittings should be checked to ensure they are firmly fixed, are not damaged and are operating correctly. Any issue should be referred to a suitably competent person.

Moving slides and mushrooms should be lubricated as shown.

Length Dim A	Cam Dim B*	Cam Dim C (min)*	Cam Dim C (max)*	Cam Dim D*	Dim E	Dim F	Dim G	Locking Points	Product Codes			
									20mm Backset 7.7mm Mushroom	20mm Backset 9mm Mushroom	22mm Backset 7.7mm Mushroom	22mm Backset 9mm Mushroom
280	157	68	88	N/A	N/A	129.5	N/A	2	TN2001	TN2007	TN2013	TN2019
400	270	125	145	N/A	N/A	175	59.5	2	TN2002	TN2008	TN2014	TN2020
600	422	200	220	N/A	N/A	249.5	59.5	2	TN2003	TN2009	TN2015	TN2021
800	597	307	287	N/A	N/A	335.5	59.5	2	TN2004	TN2010	TN2016	TN2022
1000	794	387	407	277	158	435.5	59.5	3	TN2005	TN2011	TN2017	TN2023
1200	992	486	506	377	158	535.5	59.5	3	TN2006	TN2012	TN2018	TN2024

\*Measured to the centre of mushroom rivet